

Temperature Controller CD101 Set-Up for Sous Vide

Display	Function	Factory Setting	Sous Vide Setting
ARU	Auto-tuning: Learns to keep temp within parameters with your setup. Must be on (1).	0	1
P	Proportional Band: percentage of leeway in temp	30	2
I	Integral Time	240	240
d	Derivative Time	60	60
Ar	Reference Value	25	25
r	Heat Reset	20	20
Pb	Adjust the temp probe offset here, after measuring water with another thermometer.	0	2.8
LCK	Data lock	0000	0011
SL1	Setting for different thermocouples. PT100 code.		1100
SL2-5			0000
SL6	Setting to heat		1
SL6-11			0
SLH	Upper temp limit you can set controller		85.0
SLL	Lower temp limit you can set controller		30.0
dH		2.0	2.0
dF		1	1
oH			0.1