### Change your slow cooker or Rice cooker to a Sous vide!



### Your Sous Vide at Home:

Our Sous Vide kits will turn your rice cooker or slow cooker into a Sous Vide bath allowing you to cook:

- The perfect steak every time.
- Tender juicy chicken breast that is not dry.
- The best turkey you have ever cooked.
- Salmon that is moist and full of flavour.
- Vegetables that retain all of their fresh flavour even when cooked.

#### How to set up your Sous Vide system:

- Place the temperature controller next to a rice cooker or slow cooker filled with water.
- Place the water proof sensor of the temperature controller into the water of the cooker.
- Wire the controller to your cooker according the wiring diagram.
- The controller will maintain the water temperature in the cooker automatically.

#### Benefits of the Sous Vide with our temperature controller:

- Simple to use
- Runs on both 110 Volts and 220 Volts
- Can control a large range of rice cookers and slow cookers
- Minor temperature variation, if correctly used
- Able to heat water to desired temperature
- Small size takes up minimal space on cooking area
- Easy to pack out of the way when not used

# The most common setting of Temperature Controller (PID-CD-101) for Sous Vide

| Display | Function  | Factory<br>Setting | Sous Vide<br>Setting |
|---------|---|--------------------|----------------------|
| ARU     | Auto-tuning: Learns to keep temperature within parameters with your setup. Must be on (1).  | 0                  | 1                    |
| Р       | Proportional Band: percentage of leeway in temp   | 30                 | 2                    |
| I       | Integral Time   | 240                | 240                  |
| d       | Derivative Time   | 60                 | 60                   |
| Ar      | Reference Value   | 25                 | 25                   |
| r       | Heat Reset  | 20                 | 20                   |
| Pb      | Adjust the temp probe offset here, after measuring water with another accurate thermometer. | 0                  | 2.8                  |
| LCK     | Data lock   | 0000               | 0011                 |
| SL1     | Setting for different thermocouples. PT100 code.  |                    | 1100                 |
| SL2-5   |   |                    | 0000                 |
| SL6     | Setting to heat   |                    | 1                    |
| SL7-11  |   |                    | 0                    |
| SLH     | Upper temp limit you can set controller   |                    | 85.0                 |
| SLL     | Lower temp limit you can set controller   |                    | 00.0                 |
| dH      |   | 2.0                | 2.0                  |
| dF      |   | 1                  | 1                    |
| оН      |   |                    | 0.1                  |

# DIAGRAM

## CD101-SSR OUTPUT AND RTD

**AC Wiring** 

### External AC SSR

(external SSR's are capable of handling 40 AMPS)

